

aleddra **LED Lighting**

Parking Lot LED Light Instruction Manual ASB-PL345 Series



Aleddra LED Lighting
2210 Lind Ave. SW
Suite 109
Renton WA, 98057
(425) 430-4555


WARNING: RISK OF FIRE
Keep combustible material
an adequate distance from
hot parts.

WARNING:
RISK OF Electric Shock - To
avoid electric shock, serious
injury or death, be certain
that all electrical power is
disconnected from the sup-
ply branch circuit conduc-
tors before installing or
maintaining this fixture.
This product must be in-
stalled and maintained in
accordance with the appli-
cable installation codes by a
person familiar with the
construction and operation
of the product and the haz-
ards involved.


Installation Instructions for LED Shoebox Luminaire

IMPORTANT INSTALLATION NOTES:


1. All work should be done by a qualified electrician.
2. Fixture must be installed in accordance with the National Electric Code and all applicable local codes and ordinances.
3. To reduce the risk of electric shock, insure electricity has been turned off at the circuit breaker or fuse box before beginning.
4. This fixture is for outdoor use only and should not be used in areas with limited ventilation or high ambient temperatures.
5. Fixture should never be covered with anything to allow for heat dissipation.
6. Proper grounding is required to ensure safety.
7. All installation and safety instructions should be followed for full warranty coverage.

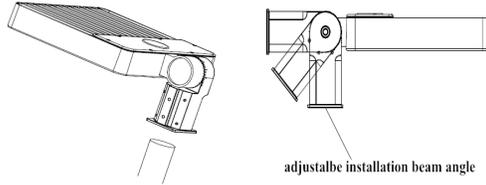

Side Arm Installation:

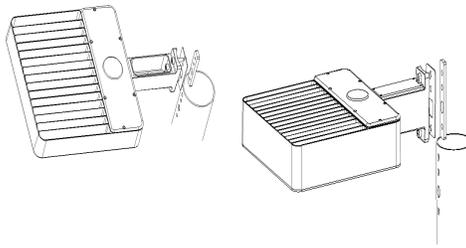

Wall Mount Installation:

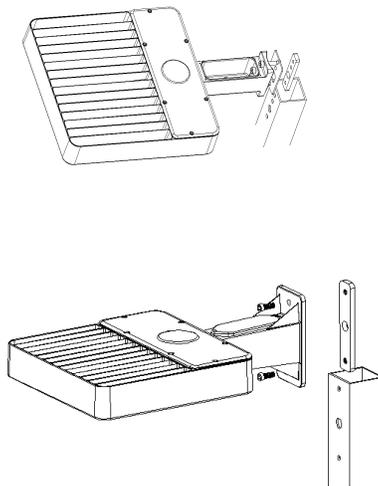

Instructions for Installation

1. **FIXTURE MOUNTING:**
 - A.) Disconnect power supply and remove existing fixture (if applicable).
 - B.) The fixture will be supplied with the desired adapter and whip / power cord already fixed to the housing.
 - C.) Mount fixture to pole or square mount.

SIDE ARM

- 1.) Adjust the beam angle.
- 2.) Drill bolt pattern into existing pole.
- 3.) Tie a thread to metal mount that will be lowered into pole (to prevent it from slipping to lower part of the pole).
- 4.) Lower metal mount into pole.
- 5.) Slip the (2) bolts through the drilled holes, making sure the whip/power cord is pulled through the middle hole and through the pole.
- 6.) Replace lock washers, washers, and nuts, then tighten from inside the pole.
- 7.) Wire the whip/power cord to the existing power source.

WALL MOUNT

- 1.) Drill 3 hole bolt pattern into existing surface area.
- 2.) Wire the whip/power cord to the existing power source.
- 3.) Secure 4 bolts through wall mount into existing surface.

**For additional instructions contact
Aleddra.com.**