


T8 WIRING DIAGRAM


FIXTURE WITH EXISTING BALLAST

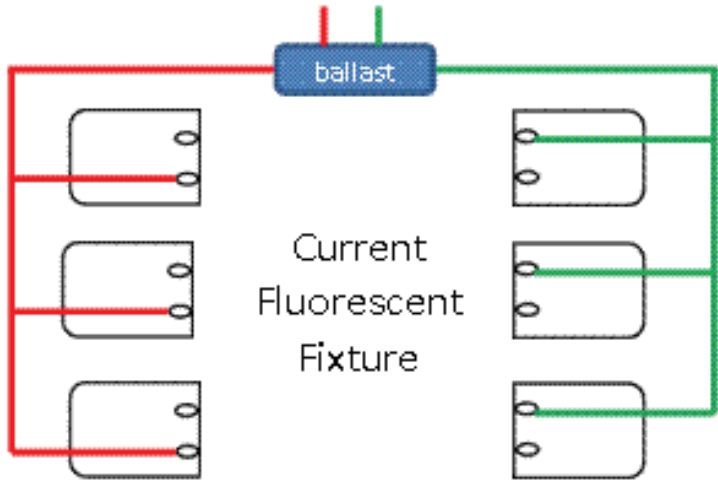

If you're using our SureFit tube with a ballast, there is no change on the wiring, since the existing fixture is already wired this way. Please refer to the wiring diagram shown on the left.

BYPASSING THE BALLAST

To bypass the ballast and operate on line voltage with our tube, please refer to the wiring diagram shown on the right. This is called double-end wired.

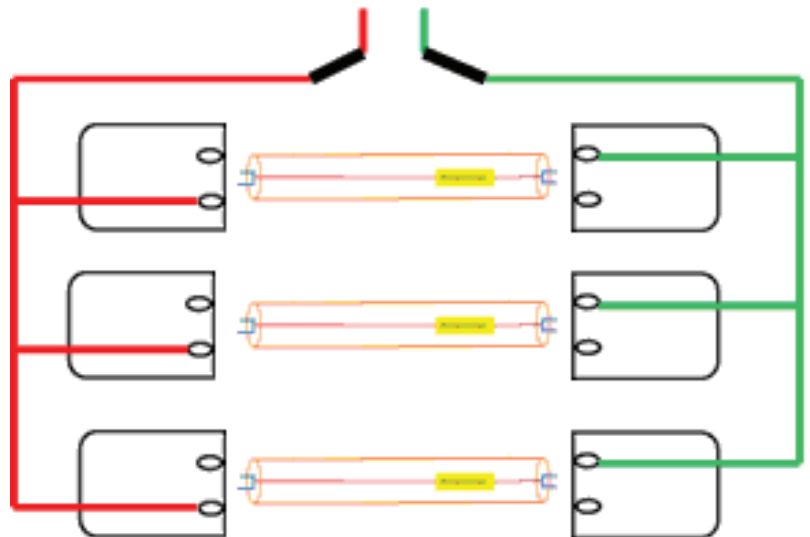

If you have any questions, please email us at info@aleddra.com.